

CLUTCH PEDAL POSITION SWITCH (Continued)

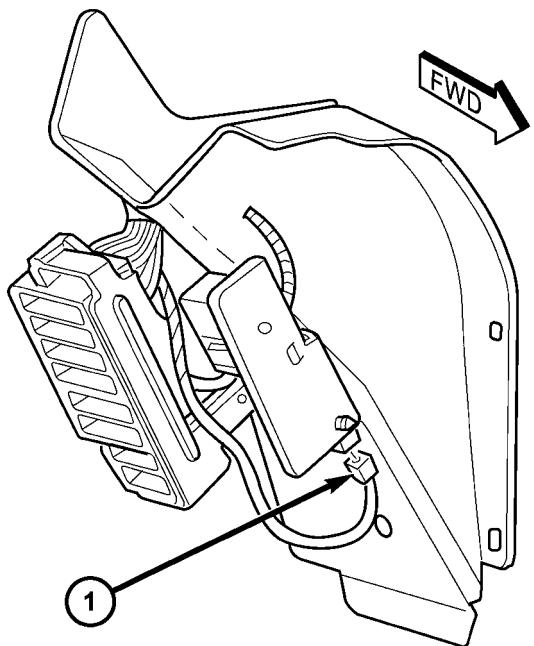


Fig. 12 CPPS ELECTRICAL CONNECTION

1 - CPPS CONNECTION TO MAIN HARNESS

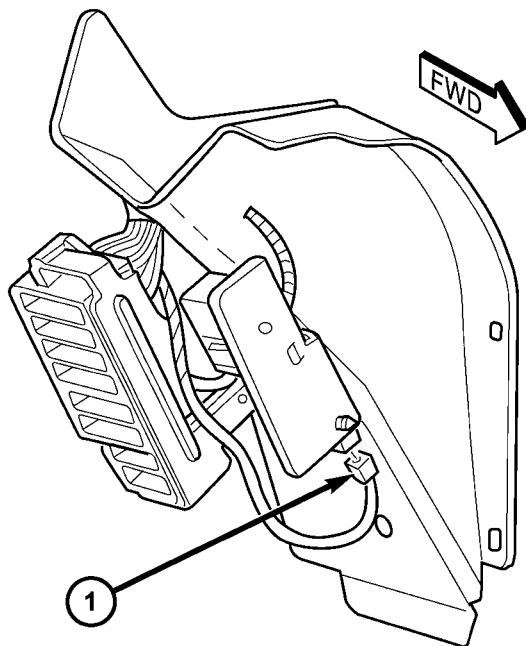


Fig. 13 CPPS ELECTRICAL CONNECTION

1 - CPPS CONNECTION TO MAIN HARNESS

OPERATION

The clutch pedal position switch is used to prevent starter motor engagement unless the clutch pedal is depressed. An input from this switch is also used to either shut down/prevent operation of the speed control system when pedal is depressed.

DIAGNOSIS AND TESTING

(1) Disconnect 2-wire switch connector under instrument panel (Fig. 13).

(2) Check switch continuity with an ohmmeter while operating clutch pedal.

- Pedal Depressed - Continuity
- Pedal Released - No Continuity

(3) If continuity is not present or always present, replace clutch master cylinder. Switch is not serviced separately.