


FUSE BLOCK

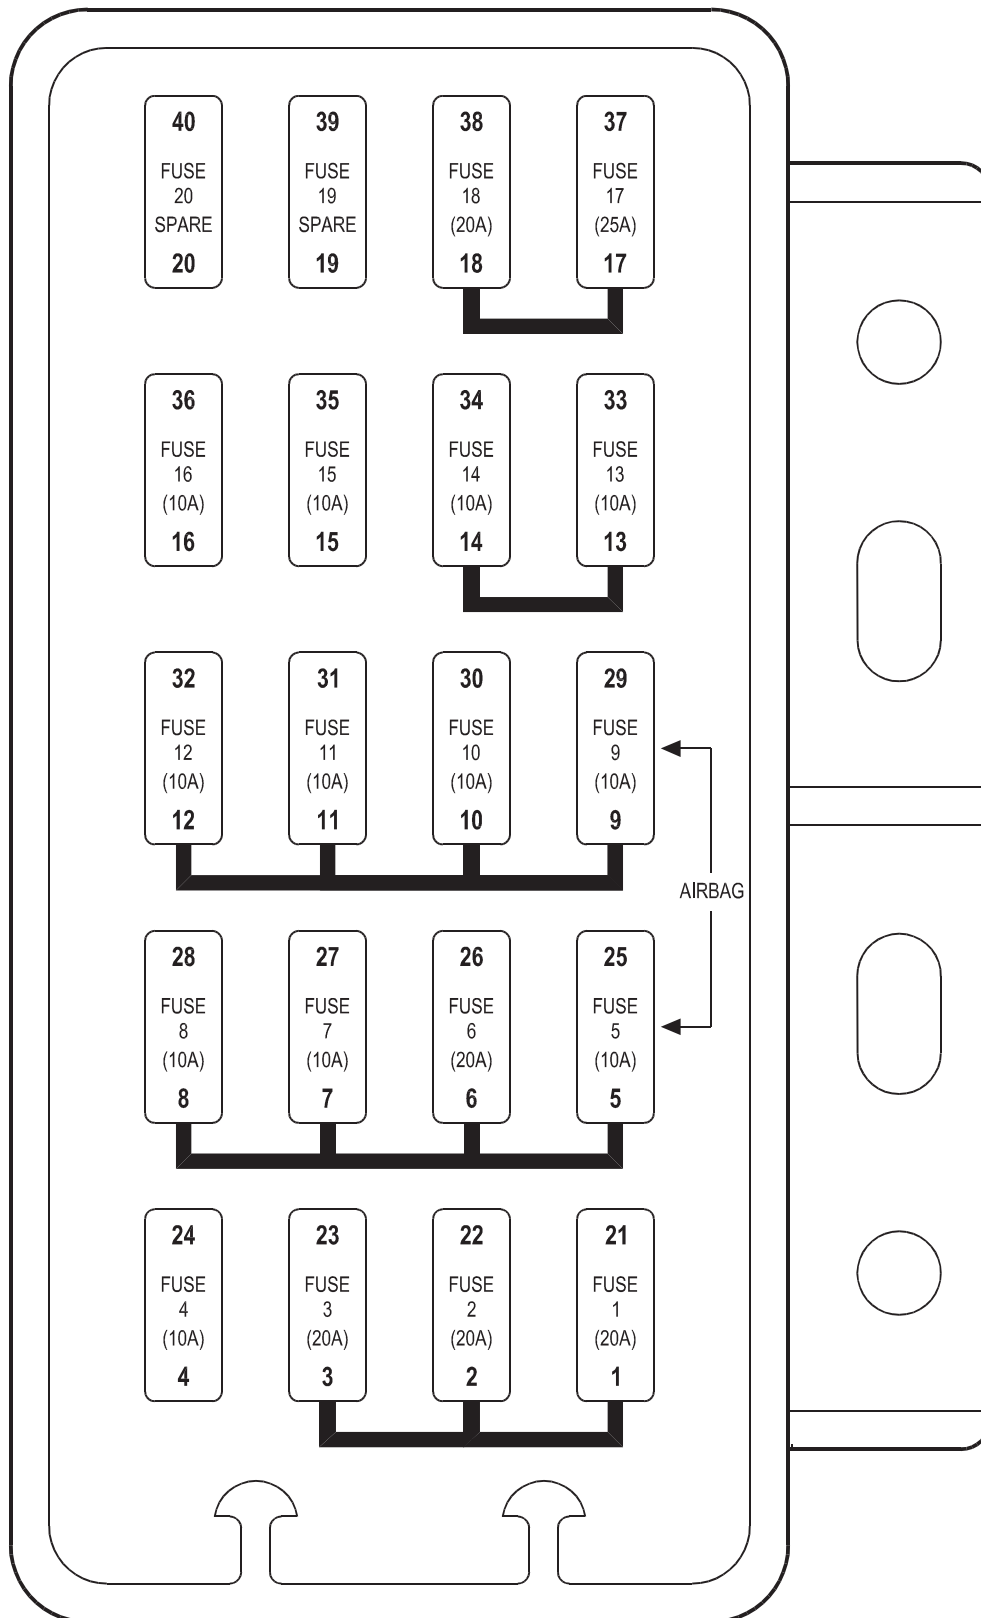

FUSES

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	20A	L177 18WT/OR	FUSED B(+)
		L177 20WT/OR	FUSED B(+)
2	20A	A103 18GY/RD	FUSED B(+)
3	20A	X13 16BK/RD ▲▲▲	FUSED B(+)
4	10A	Z902 20BK	GROUND
5	10A	F100 18PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
6	20A	F302 18GY/PK ■■■	FUSED IGNITION SWITCH OUTPUT (RUN)
7	10A	F102 20PK/DB	FUSED IGNITION SWITCH OUTPUT (RUN)
8	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
9	10A	F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
		F201 18PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
10	10A	F505 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
		F505 20PK/YL	
11	10A	F960 20PK/LG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
12	10A	F1 20PK/WT	FUSED IGNITION SWITCH OUTPUT (RUN-START)
		F1 20PK/WT	
13	10A	L5 20WT/LB	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
14	10A	X112 16DG/GY	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
15	10A	C515 20LB/OR ■■■	FUSED REAR WINDOW DEFOGGER RELAY OUTPUT
16	10A	L45 20LG/DG ▲▲	DIMMER SWITCH LOW BEAM OUTPUT
		L45 20LG/DG ▲▲	
17	25A	F300 16OR/PK	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
		F300 16OR/PK	
18	20A	A207 18RD/LG	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
19	-	-	-
20	-	-	-

▲▲▲ SUBWOOFER

▲▲ EXPORT

■■■ HARDTOP