

INSTALLATION

The crankshaft rear main bearing oil seal consists of two half pieces of viton with a single lip that effectively seals the rear of the crankshaft. Replace the upper and lower seal halves as a unit to ensure leak-free operation.

(1) Wipe the seal surface area of the crankshaft until it is clean.

(2) Apply a thin coat of engine oil.

(3) Coat lip of the seal with engine oil.

(4) Carefully position the upper seal into the groove in the cylinder block. The lip of the seal faces toward the front of the engine.

(5) Apply Mopar® Gasket Maker sealer on both sides of cylinder block as shown in (Fig. 54). The dab of sealer should be 3 mm (0.125 in.) in diameter.

(6) Apply Mopar® Gasket Maker on the rear bearing cap (Fig. 54). The bead should be 2.3 mm (0.09 in.) in diameter. DO NOT apply sealer to the lip of the seal.

(7) Position the lower seal into the bearing cap recess and seat it firmly. Be sure the seal is flush with the cylinder block pan rail.

(8) Coat the outer curved surface of the lower seal with soap and the lip of the seal with engine oil.

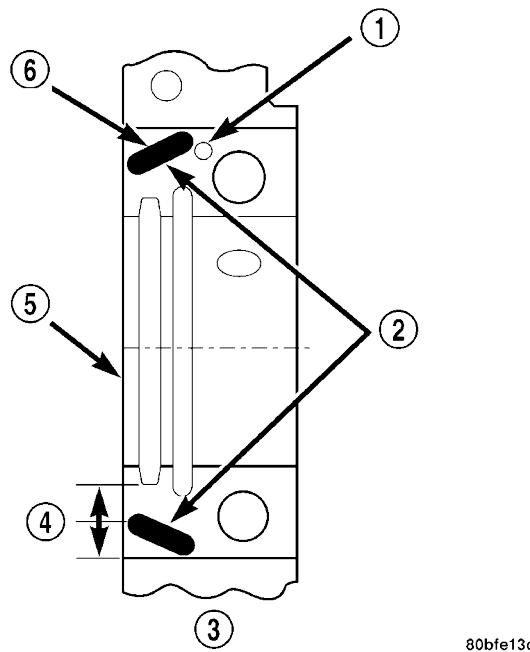


Fig. 54 Location of Sealer

- 1 - DOWEL
- 2 - SEALER LOCATIONS
- 3 - CYLINDER BLOCK
- 4 - HALFWAY BETWEEN
- 5 - REAR FACE OF CYLINDER BLOCK
- 6 - 3mm (0.125 in.)

(9) Install the rear main bearing cap. DO NOT strike the cap more than twice for proper engagement.

(10) Tighten all main bearing bolts to 108 N·m (80 ft. lbs.) torque.

(11) Install the main bearing cap brace. Tighten nuts to 47 N·m (35 ft. lbs.).

(12) Install the oil pan gasket and oil pan (Refer to 9 - ENGINE/LUBRICATION/OIL PAN - INSTALLATION).

(13) Apply Mopar® Silicone Rubber Adhesive Sealant on cylinder block to rear main bearing cap corners and cylinder block to front cover joints (four places) (Fig. 55)

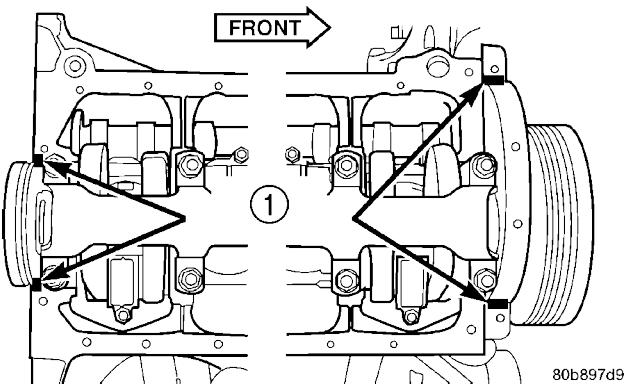


Fig. 55 Oil Pan

1 - SEALER LOCATIONS

(14) Install transmission inspection cover.

HYDRAULIC LIFTERS

DESCRIPTION

Valve lash is controlled by hydraulic tappets located inside the cylinder block, in tappet bores above the camshaft.

REMOVAL

NOTE: Retain all the components in the same order as removed.

(1) Remove the engine cylinder head (Refer to 9 - ENGINE/CYLINDER HEAD - REMOVAL).

(2) Remove the push rods.

(3) Remove the tappets through the push rod openings in the cylinder block with a Hydraulic Valve Tappet Removal/Installation Tool (Fig. 56).