





MOPAR®

JEEP WRANGLER


Hardtop Wiring

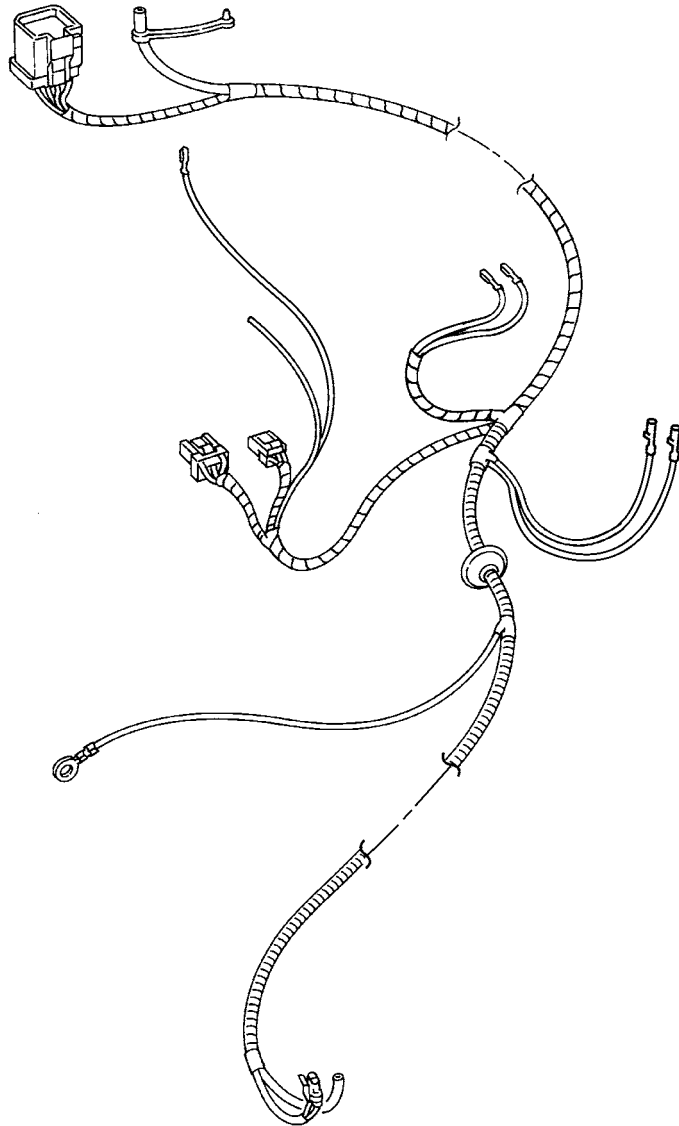

A

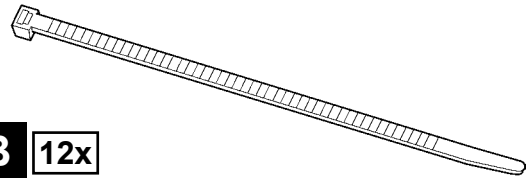


B 12x

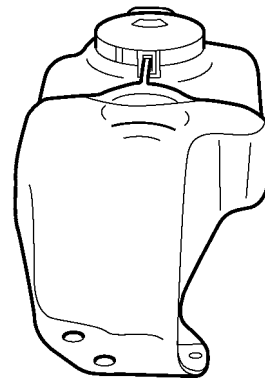

C




D

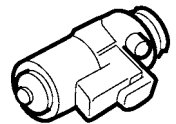


E




F

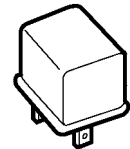



G

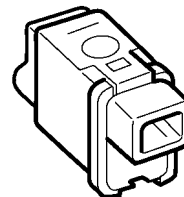

H

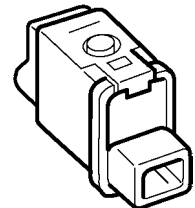





I

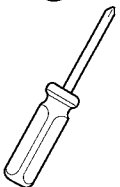



10mm




15mm

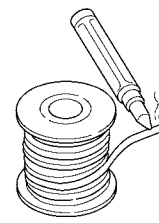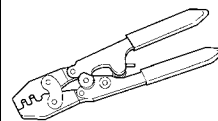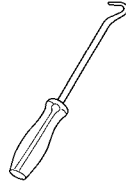


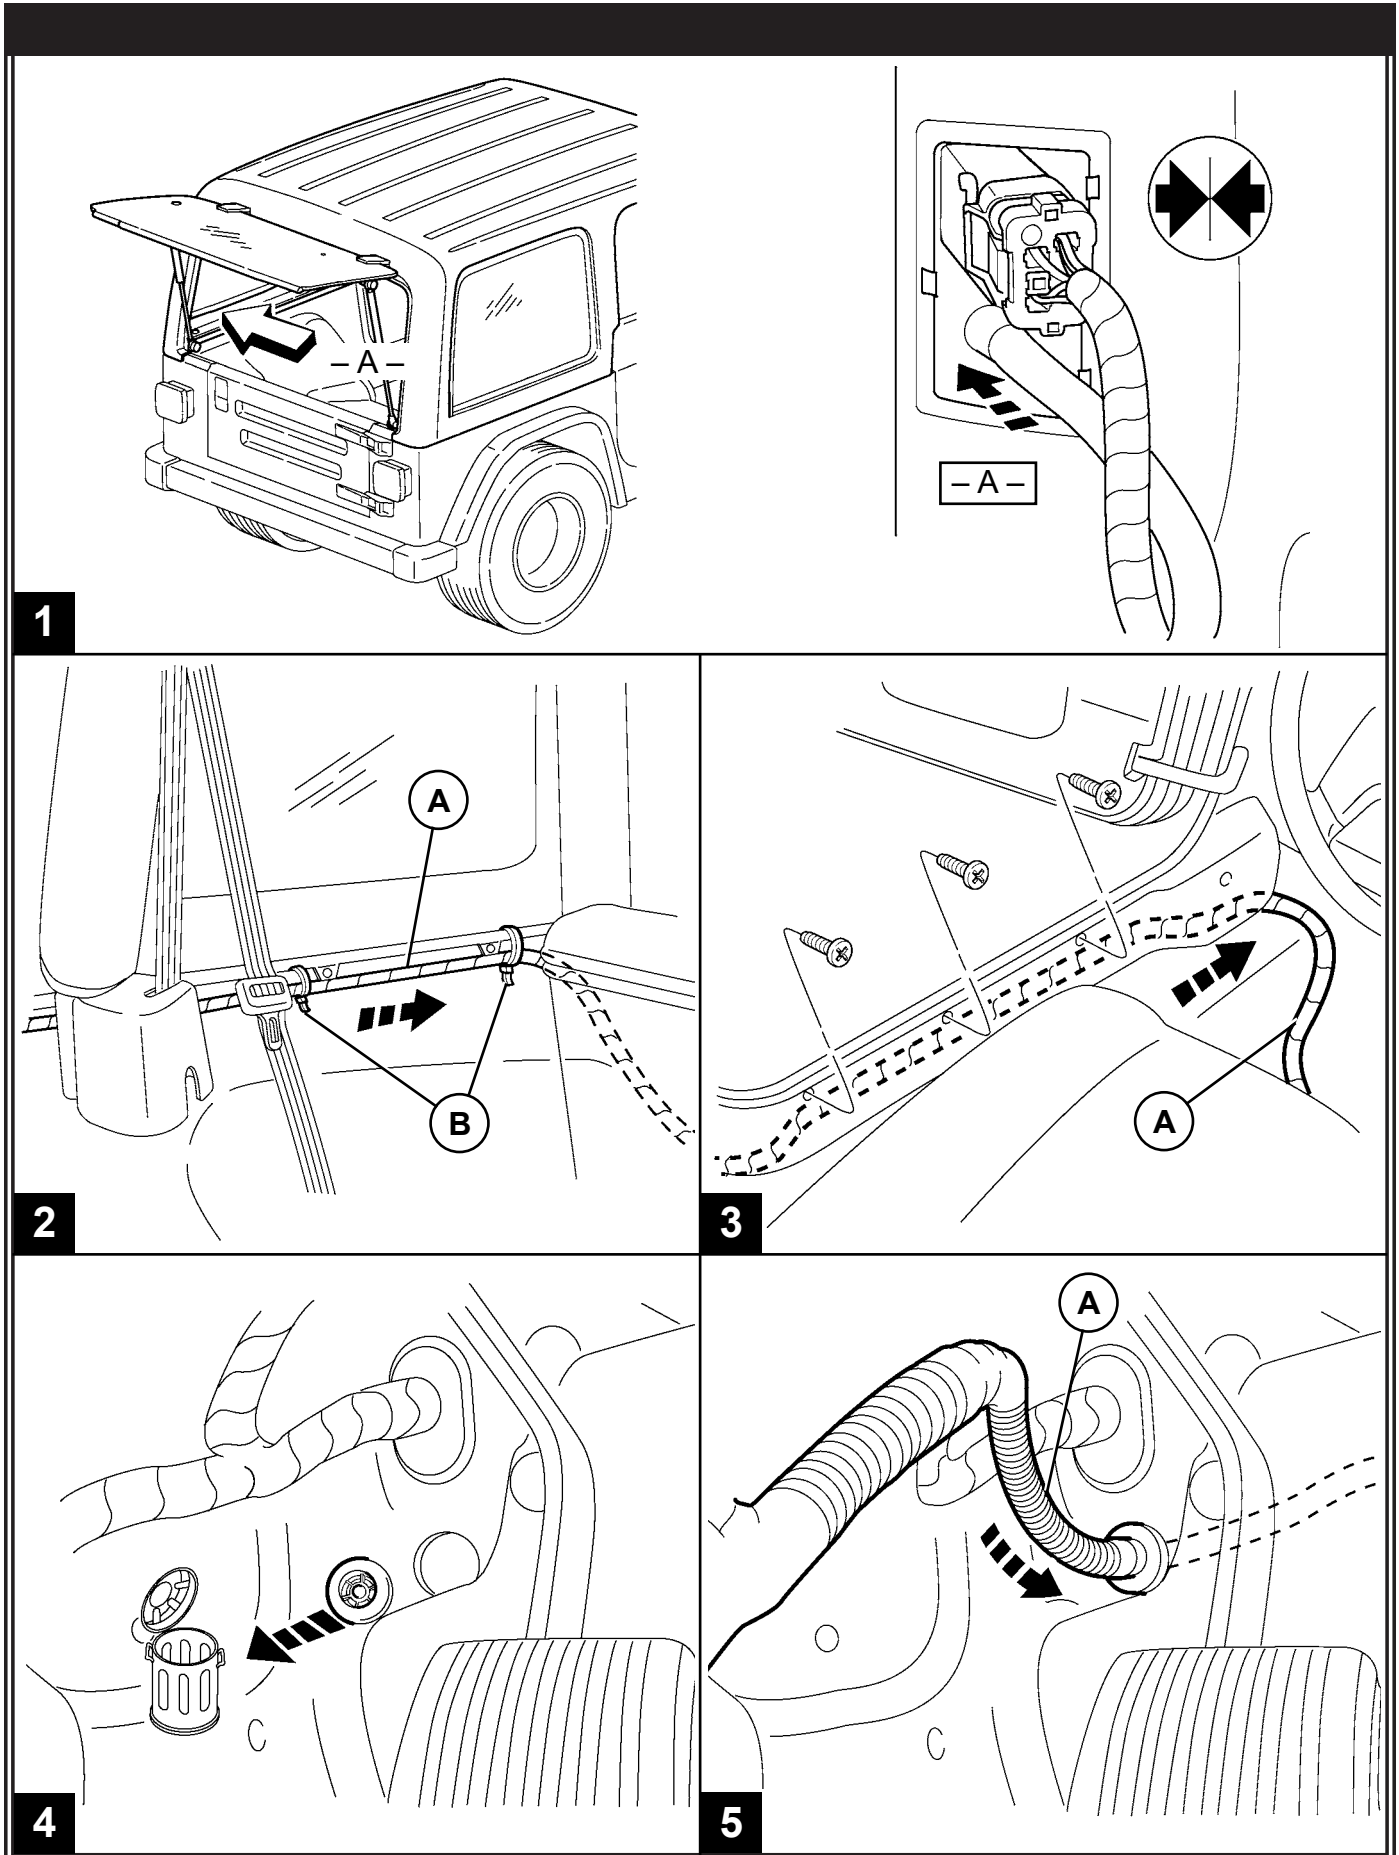

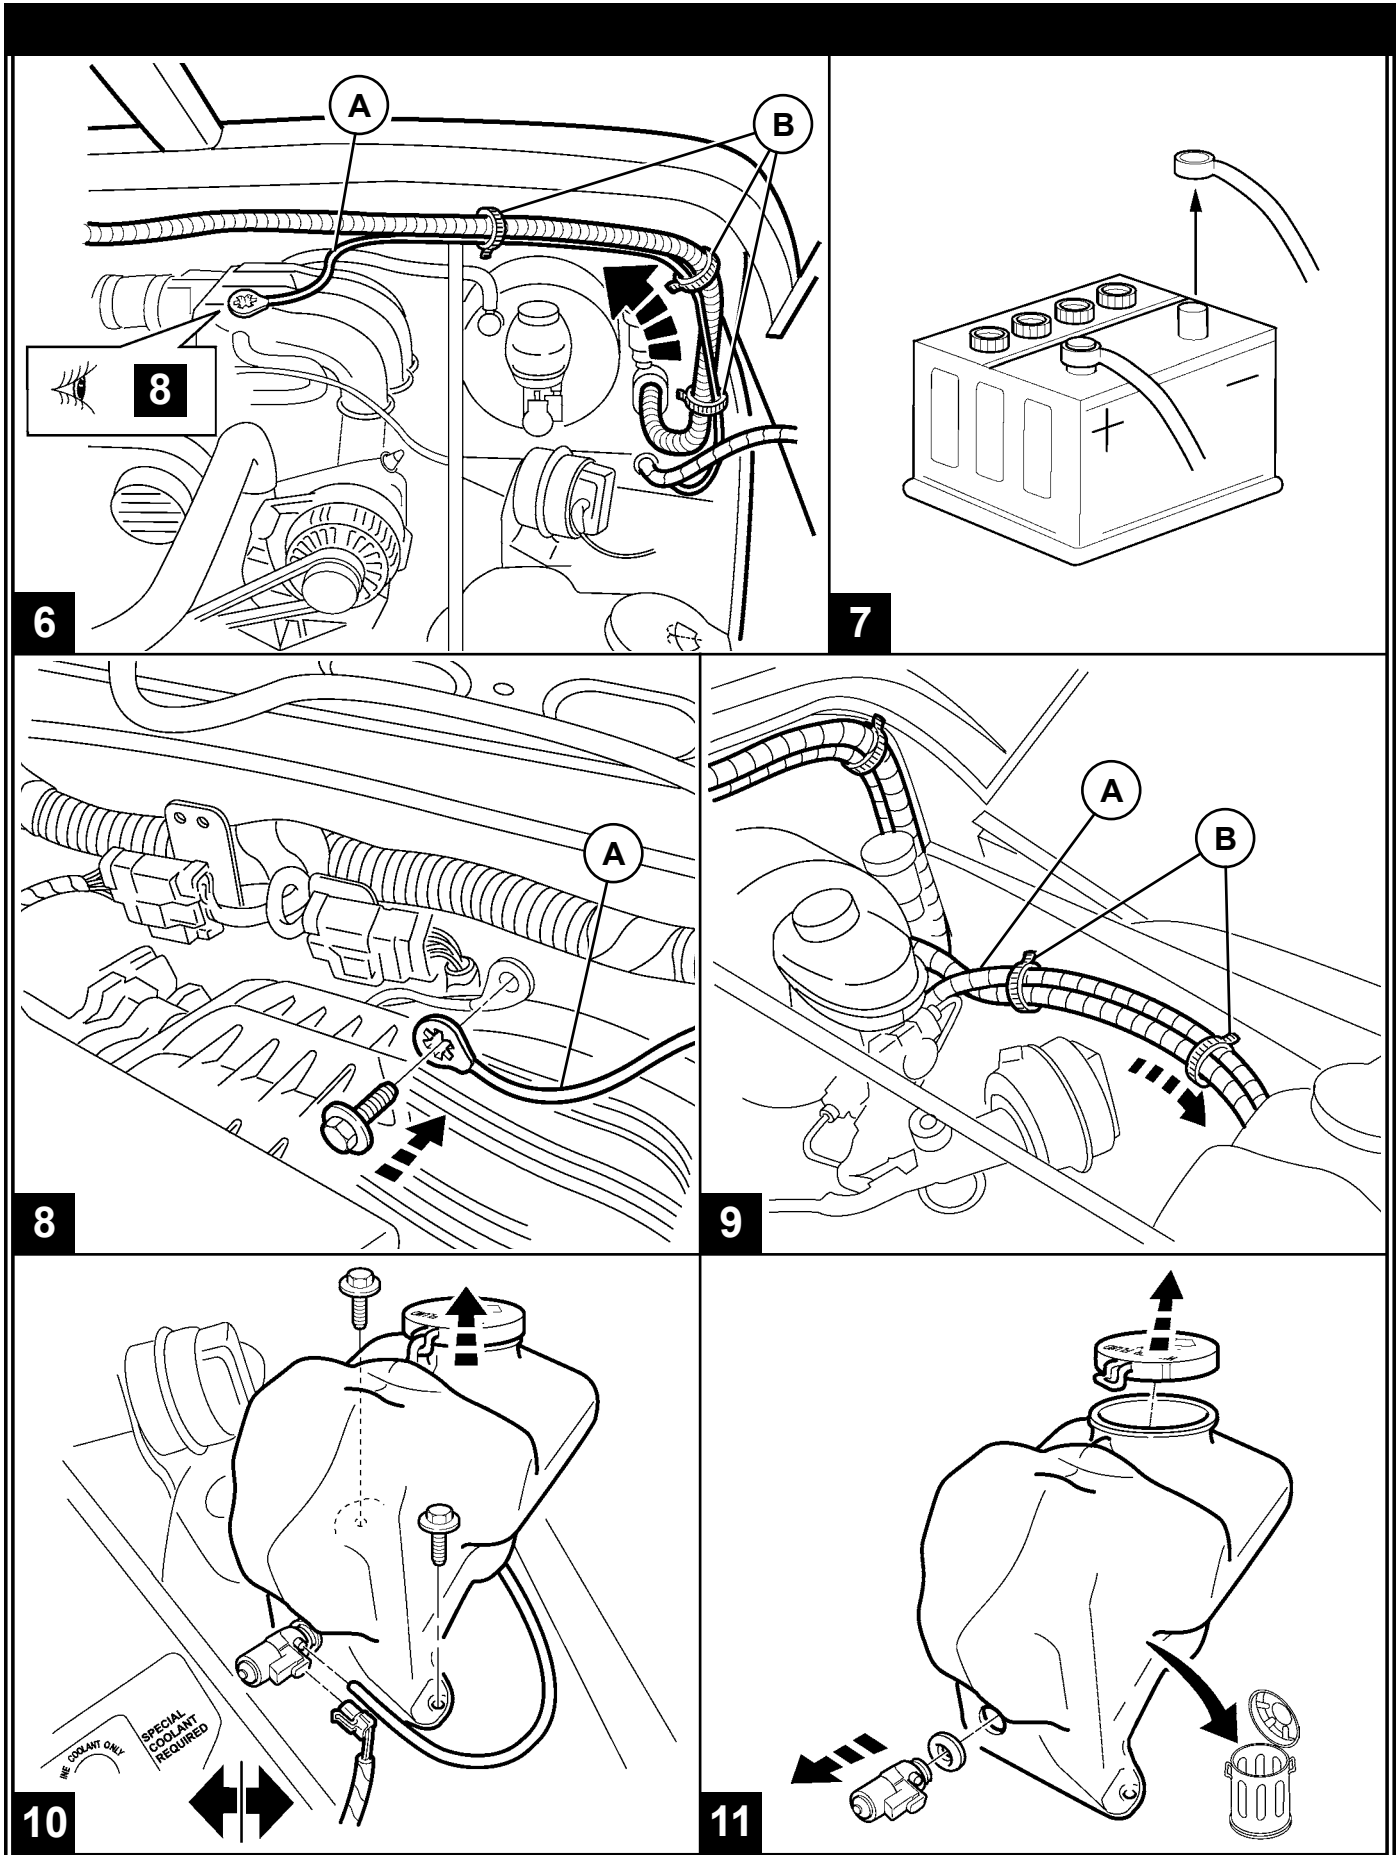


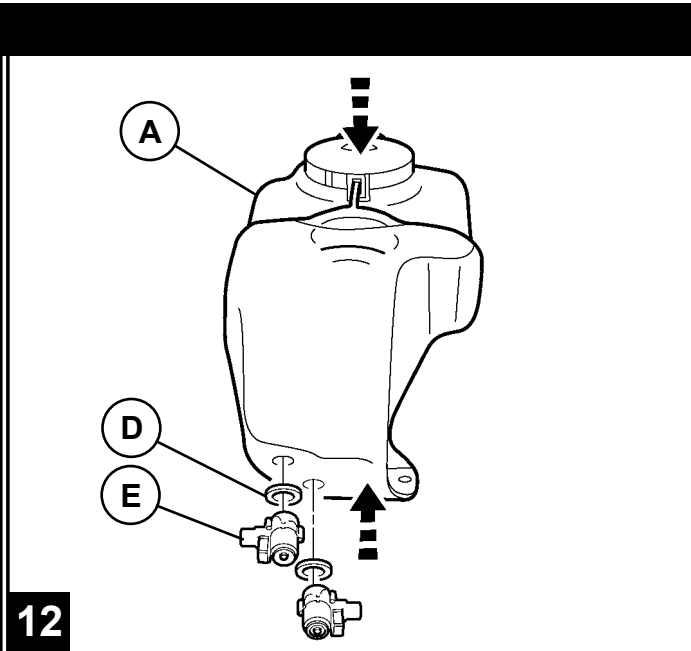


12

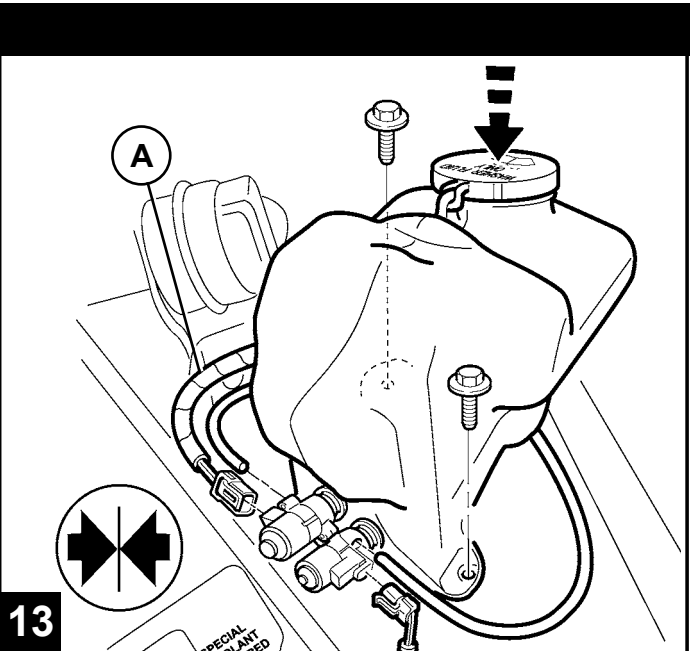


13

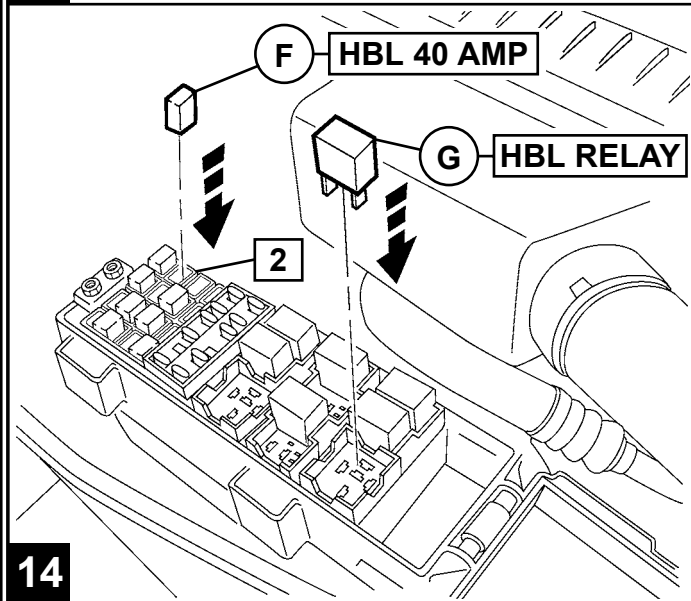


14

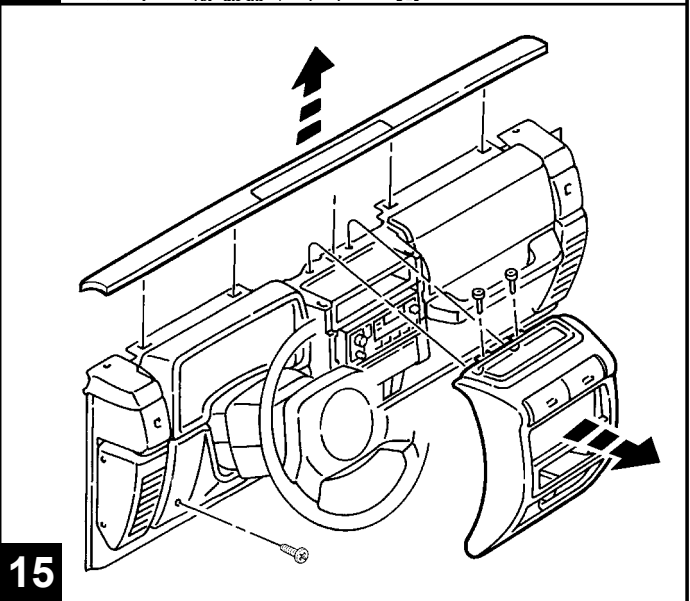


15

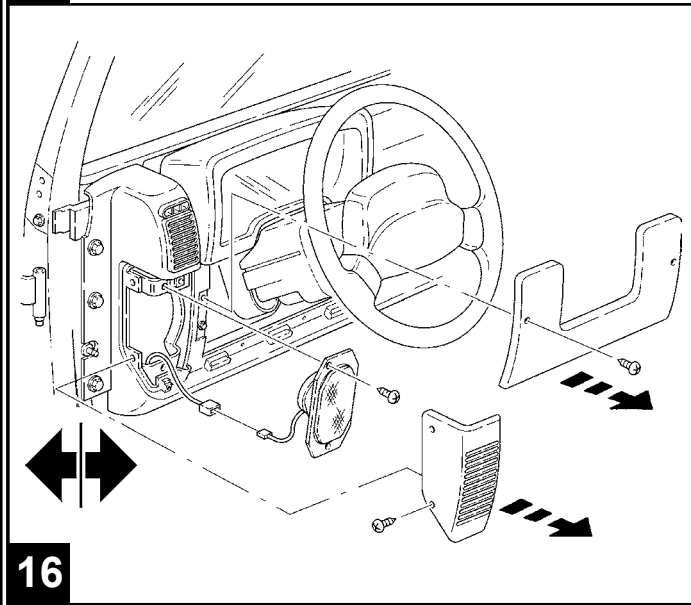


16

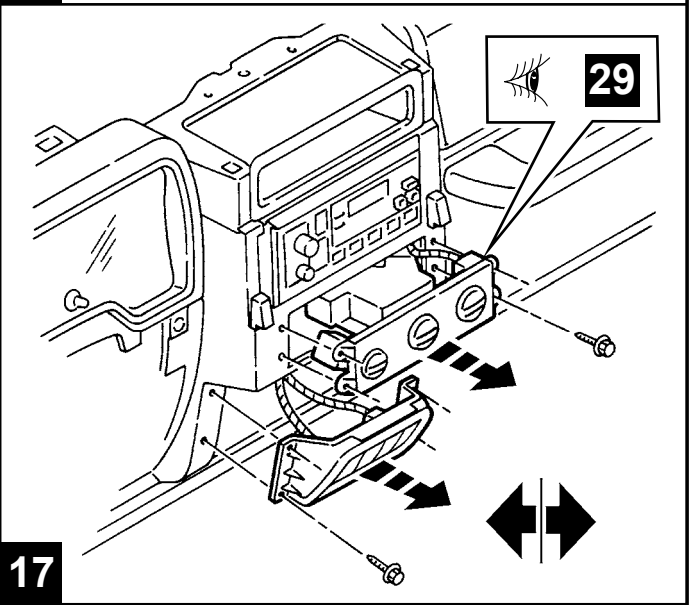


17

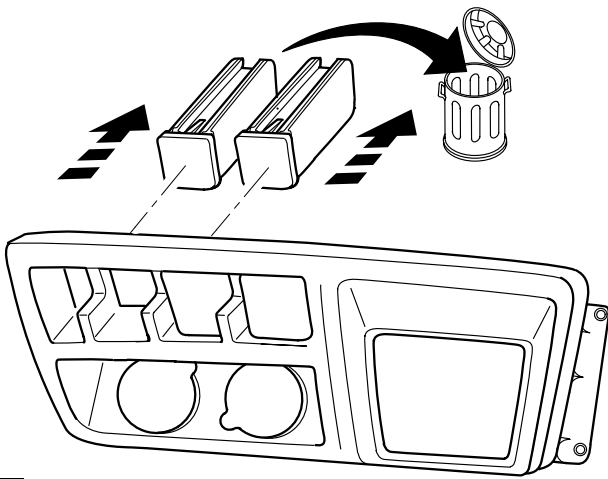


18

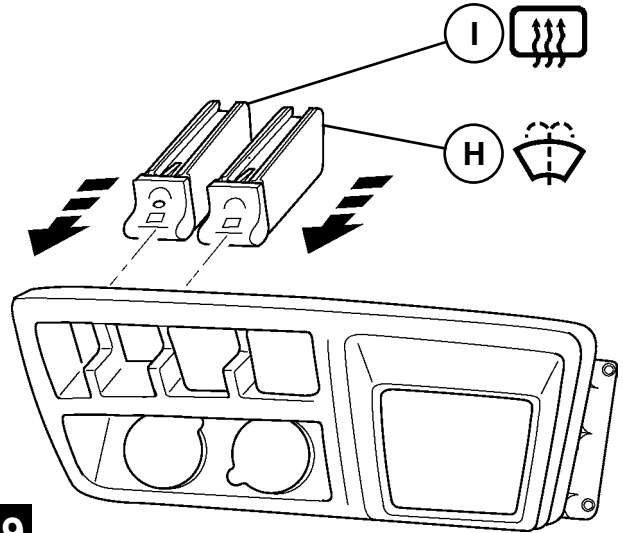


19

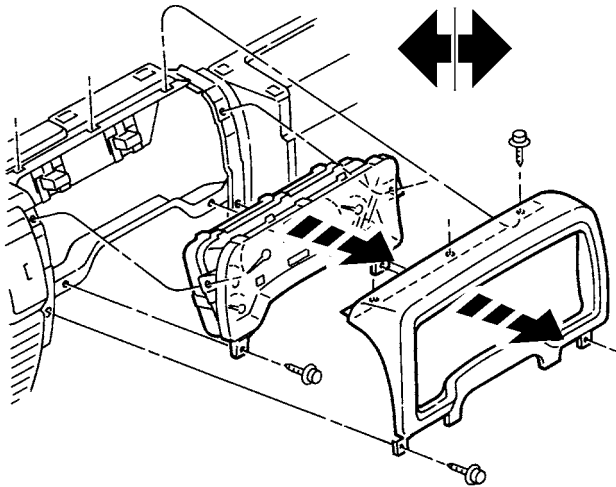


20

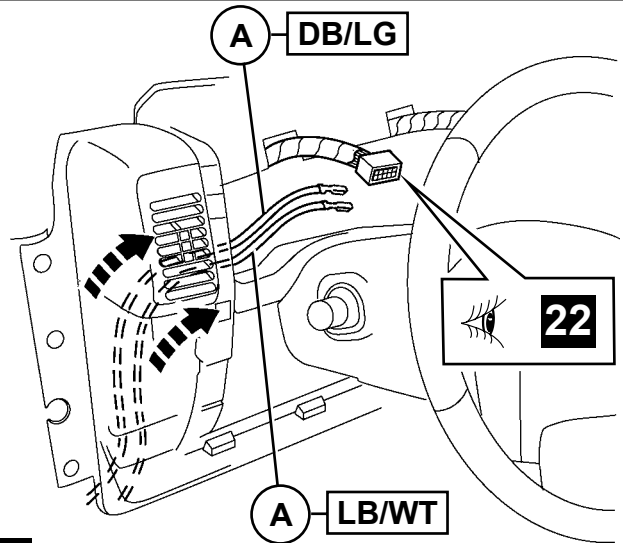


21

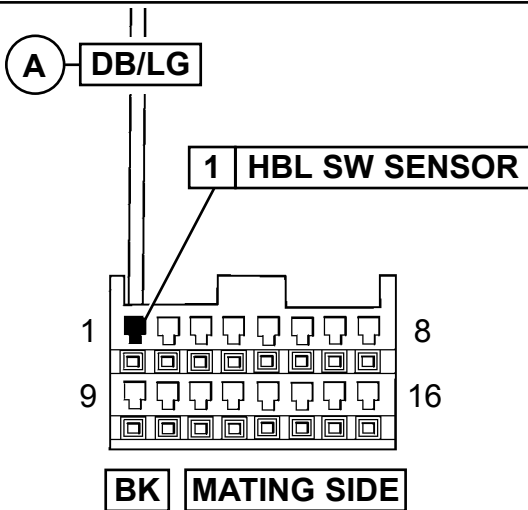


22

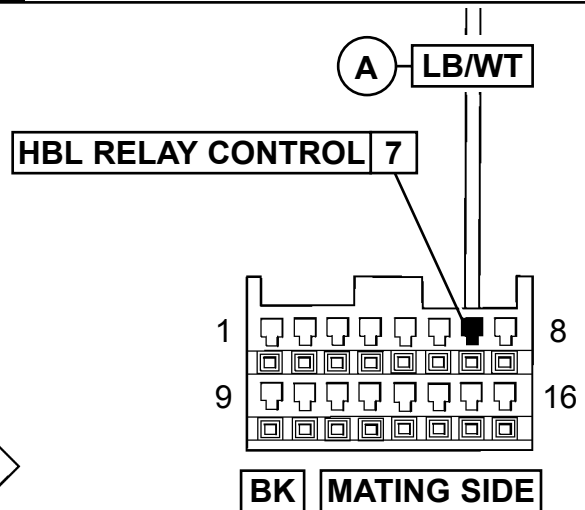


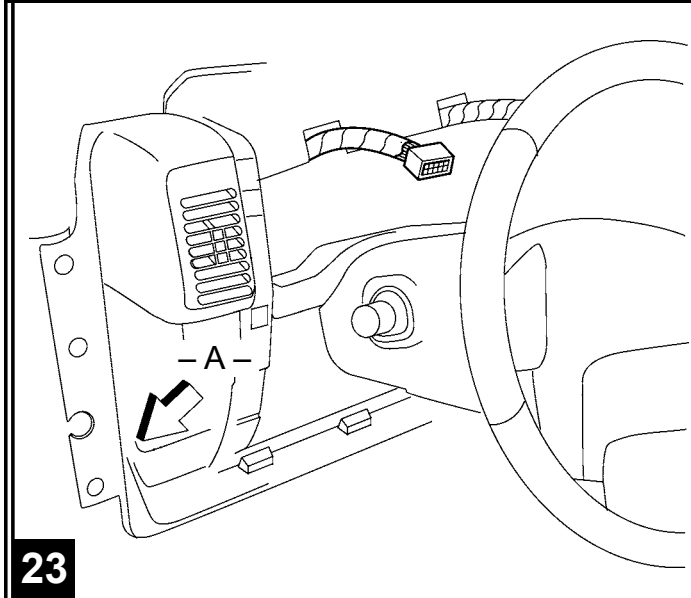


23

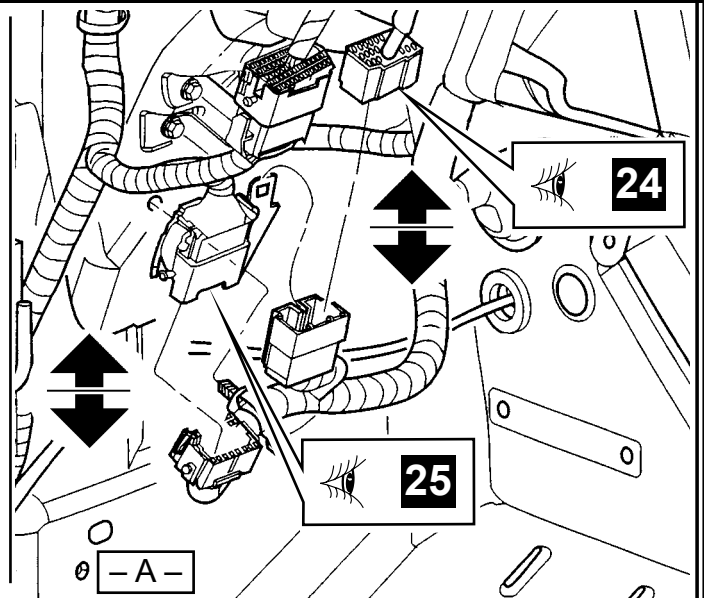


24

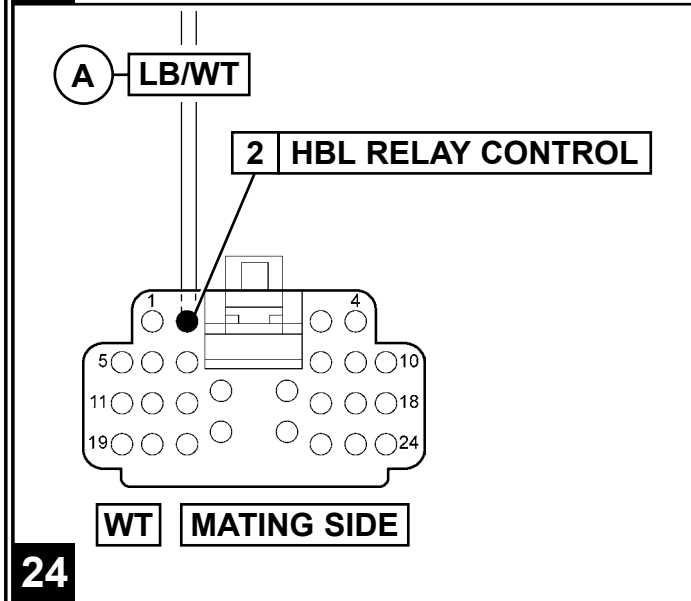


24

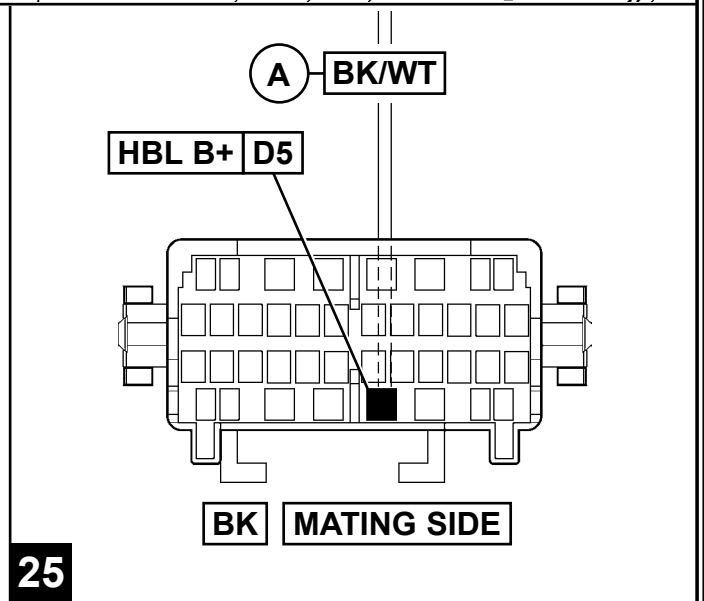

25

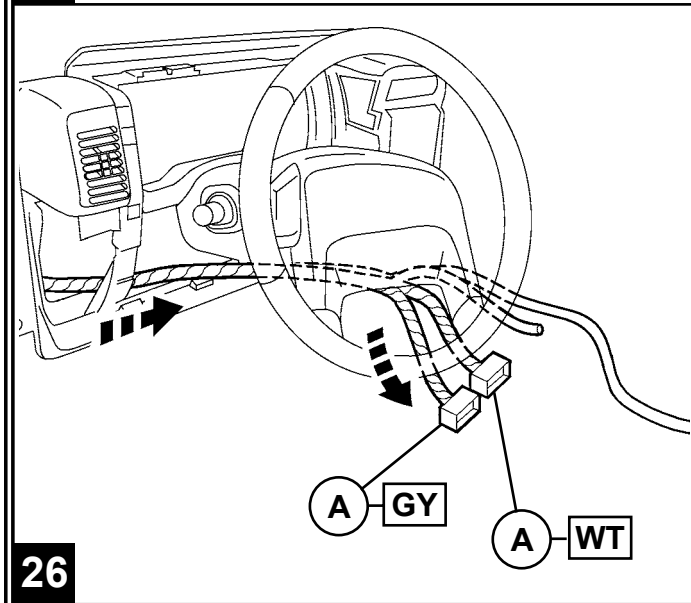

26

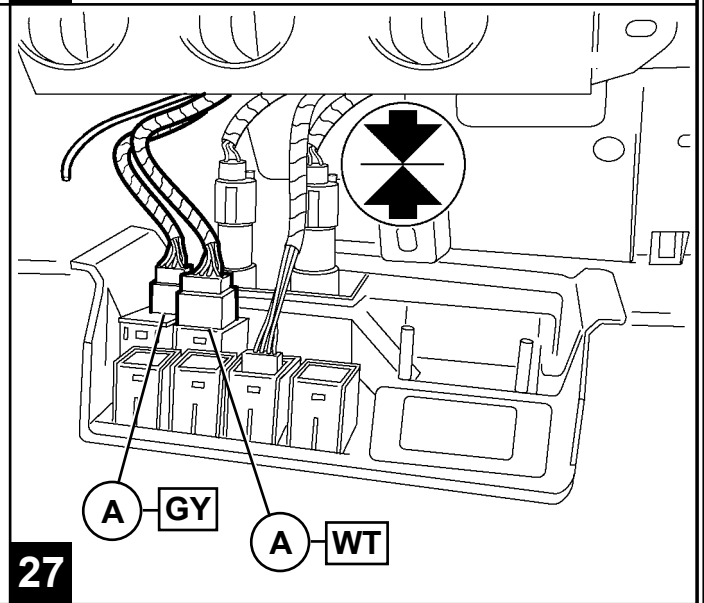

27

