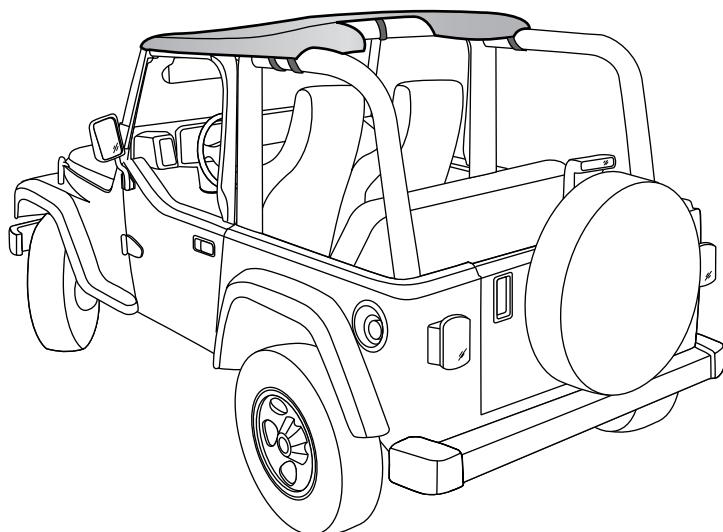




GENUINE ACCESSORIES

**GB****INSTALLATION INSTRUCTION**

Parts must not be fitted until registration of the vehicle has been obtained.

SUNBONNET**E****INSTRUCCIONES DE MONTAJE**

No se permite montar las piezas antes de registrar el vehículo.

F**NOTICE DE MONTAGE**

Ne pas monter les pièces avant l'enregistrement du véhicule.

JP

Subject to alteration without notice
Reservadas modificaciones técnicas
Sous réserve de modifications techniques

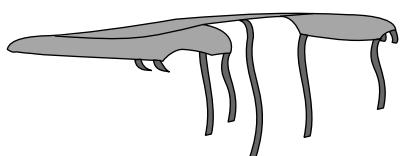
2003	82207733
2003	82207734
2003	82207948
2003	82207949

© DAIMLERCHRYSLER



GENUINE ACCESSORIES

Sunbonnet

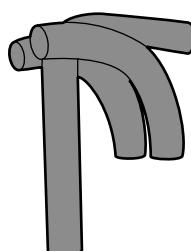


A

Bracket

X2

Hard Top Only



B

Cap

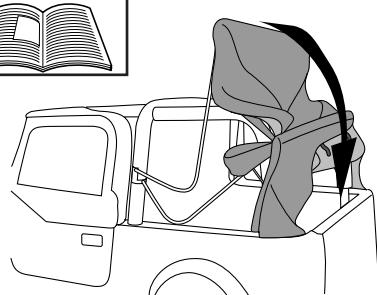
X2

Hard Top Only



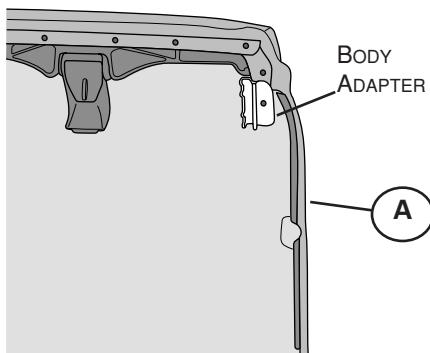
C

SOFT TOP VEHICLE



1

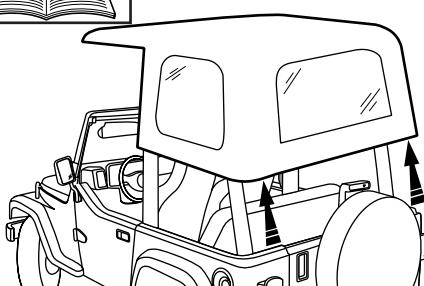
Release the front of the top from the windshield and lay the bows down. Refer to owner's manual for instructions to remove top.



2

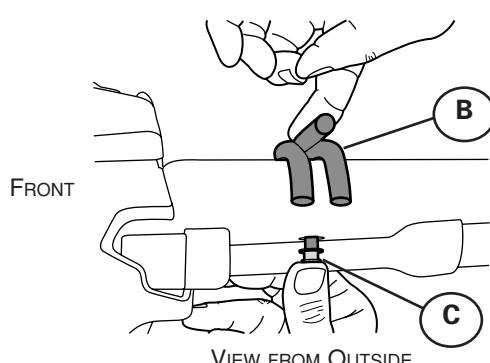
Orient the Sunbonnet with the body adapter toward the front.

HARD TOP VEHICLE



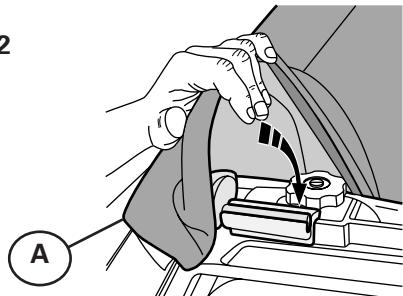
1

Remove the hard top. Refer to owner's manual for instructions.

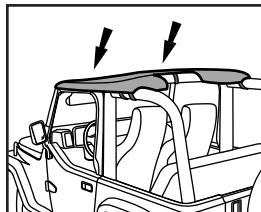
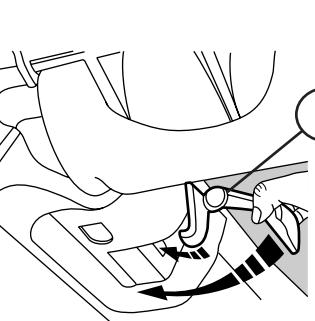


2

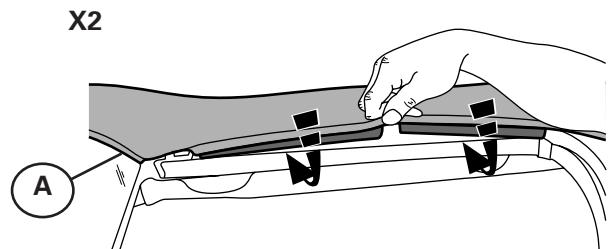
Place the Bracket into the hole in the sport bar above the door on each side of the vehicle. Secure it with a Cap.

GENUINE ACCESSORIES
SOFT TOP VEHICLE
X2

3

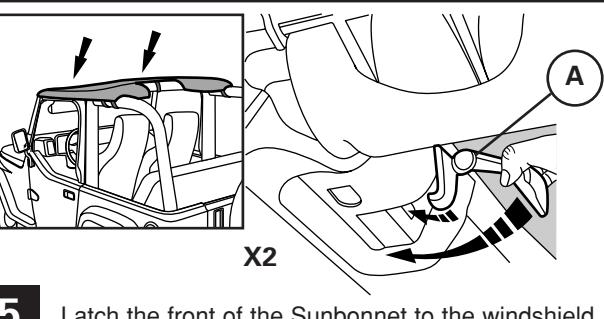
Place the Sunbonnet on the vehicle. Hook the body adapter on each side over the ledge of the door surround.


X2
A

4

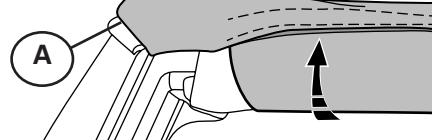
Latch the front of the Sunbonnet to the windshield.


X2
4

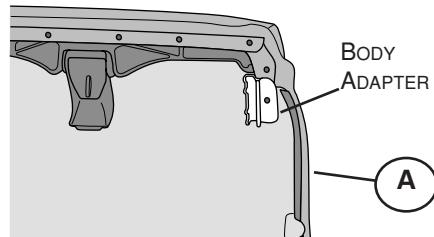
Place the Sunbonnet on the vehicle. Hook the body adapter on each side over the brackets installed earlier.

5

X2
A
5

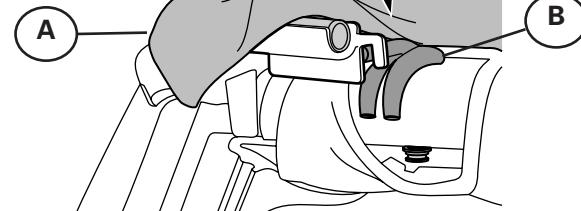
Latch the front of the Sunbonnet to the windshield.

X2

6

Wrap the flaps above the doors around the sport bar and fasten the hook and loop strips to each other.

HARD TOP VEHICLE

BODY ADAPTER
A

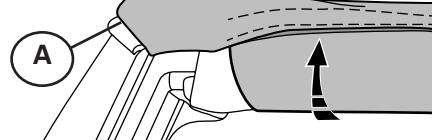
Orient the Sunbonnet with the body adapter toward the front.

3
X2
A

4

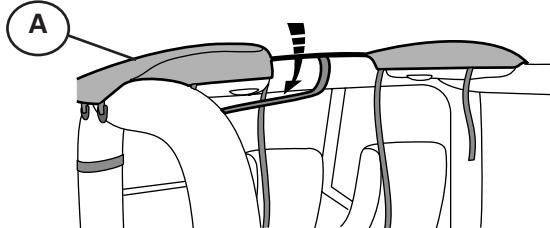
Place the Sunbonnet on the vehicle. Hook the body adapter on each side over the brackets installed earlier.

5
X2
A
5

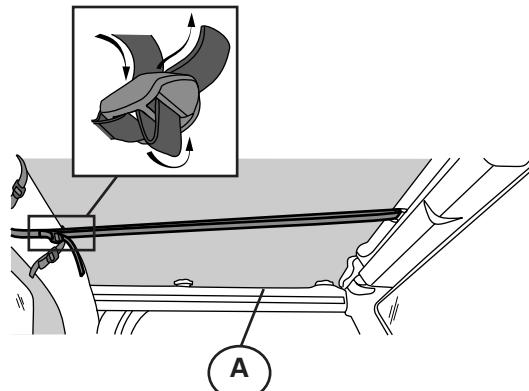
Latch the front of the Sunbonnet to the windshield.

X2

6

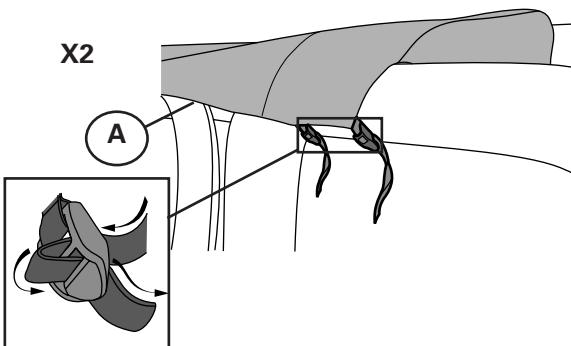
Wrap the flaps above the doors around the sport bar and fasten the hook and loop strips to each other.

GENUINE ACCESSORIES
SOFT TOP VEHICLE


6 Pull the long strap around the sport bar and toward the front of the vehicle.

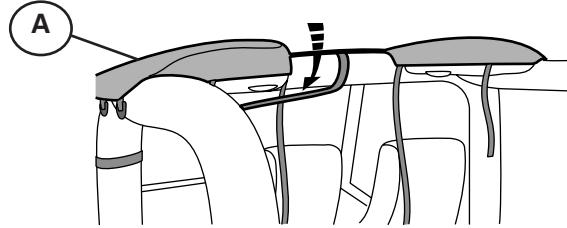


7 Thread the strap through the footman loop above the windshield. Pull the end of the strap back and thread it through the buckle. Pull it tight.

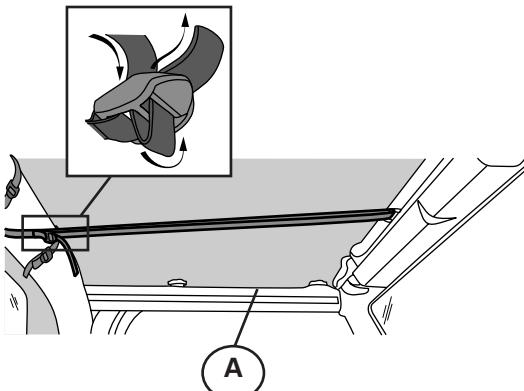


8 Wrap the straps on the rear of the Sunbonnet around the speaker pods, two straps on each side. Thread them through the buckles.

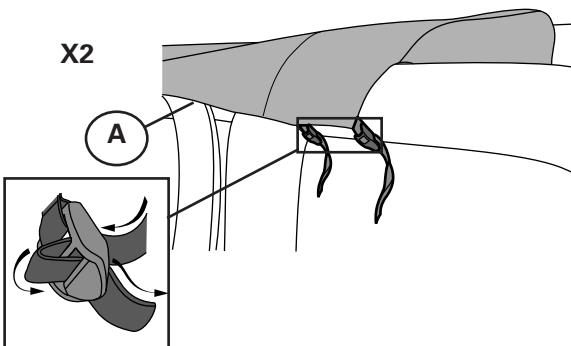
9 Tighten all straps.

HARD TOP VEHICLE


7 Pull the long strap around the sport bar and toward the front of the vehicle.



8 Thread the strap through the footman loop above the windshield. Pull the end of the strap back and thread it through the buckle. Pull it tight.



9 Wrap the straps on the rear of the Sunbonnet around the speaker pods, two straps on each side. Thread them through the buckles.

9 Tighten all straps.